


Moving Instructions

Relocating a franking machine to a home location with internet access


This guide is for moving machines connected via LAN. If your machine uses a wireless connection/PC or requires an upgrade to a Smartlink device, please contact our Technical Service team on 0800 977 8084 for assistance.

1. Move your machine

1. Disconnect your machine from the power socket and router socket, leaving all cables connected to your franking machine; including power cable, network cable and adapter. The adapter will be one of the following types:

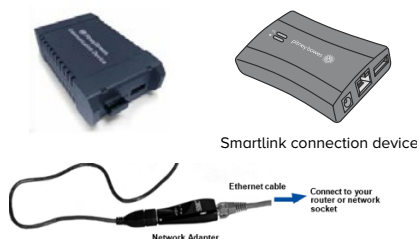

2. Reconnect at home by plugging your network cable with adapter into one of the yellow LAN connectors at the back of your broadband router (not the red WAN connection).

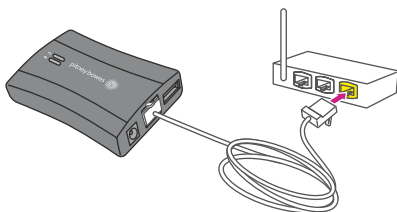

3. Plug the franking machine power cable into a power socket and switch on. Now check your connection.

Smartlink adapter available at £85.00 + P&P

2. Check your connection

TMR d60

1. Press 'Menu/Options'.
2. Press Up/Down to select 'Connect to Pitney Bowes'.
3. Press 'Enter' to connect.
4. Display should show 'No updates available'.
5. All done.



TMR d160/220

1. Press 'Options'.
2. Press 'Page Down' to select 'Connect to the data center'.
3. Select 'Uploads and downloads'.
4. Display should show 'No updates available'.
5. All done.



TMR m300

1. Press 'Options'.
2. Press 'Page Down' to select 'Data center options'.
3. Select 'Connect to the data center'.
4. Select 'Uploads and downloads'.
5. Display should show 'No updates available'.
6. All done.



Authorised independent inspector and maintainer of franking machines

We go **Beyond Mailing**

Mail Management | Mailing Equipment | Postal Discount | Complete Support



The Mailing Room